 


WINNERS ONLY® Assembly Instructions

DC33046R / DC33046G

Thank you for purchasing this quality product. Be sure to check all packaging material carefully for small parts that may have come loose inside the carton during shipment.

COMPONENT LIST:

PART NO	FIGURE	DESCRIPTION	QTY
DC33046R-01/ DC33046G-01		Hardware Bag	1 pce
DC33046R-13/ DC33046G-13		Table Top	1 pce
DC33046R-07/ DC33046G-07		Legs	4 pcs

HARDWARE LIST:

PART NO	FIGURE	DESCRIPTION	QTY
1		Hex Bolt	8 pcs
2		Lock Washer	8 pcs
3		Flat Washer	8 pcs
4		Wrench	1 pce


This product will take 15-20 minutes to assemble.

Reminders

1. Use only the hardware supplied.
2. Once the product is assembled, level and tighten all the bolts.
3. Do not over-tighten bolts.
4. This item may require periodic tightening

NOTE:

1. Two or two people are needed for assembly
2. Please keep all hardware parts out of the reach of children.

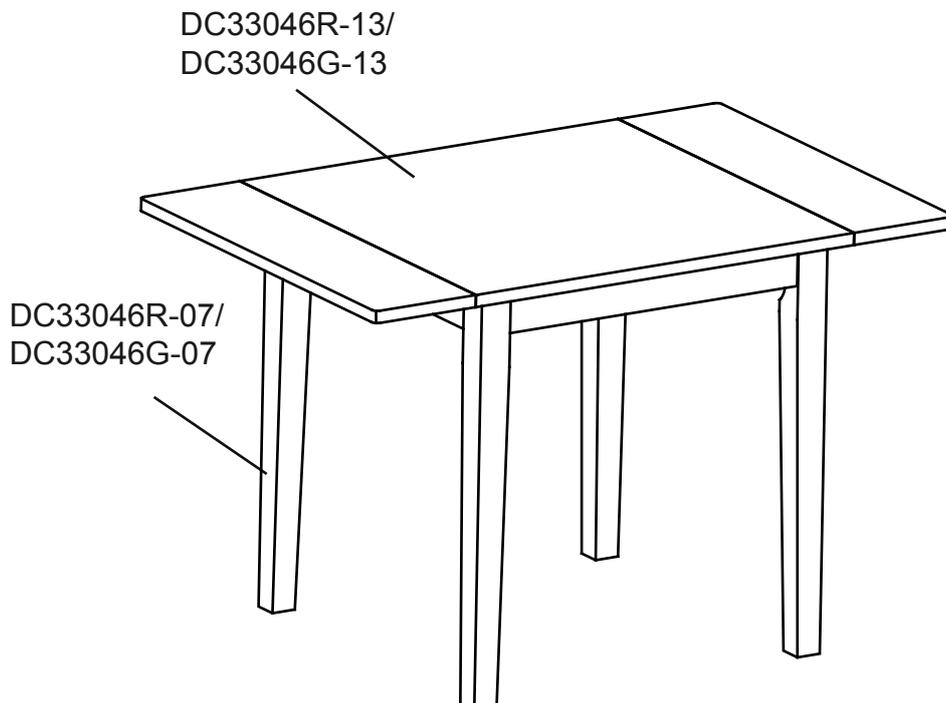

WINNERS ONLY® Assembly Instructions


DC33046R / DC33046G

ASSEMBLY :

STEP 1

1.1-Turn the Table Top upside down on a protective surface such as carpet or other soft material

1.2-Insert the four legs into the corner of the apron and attached using the provided hardware as shown on Fig.1

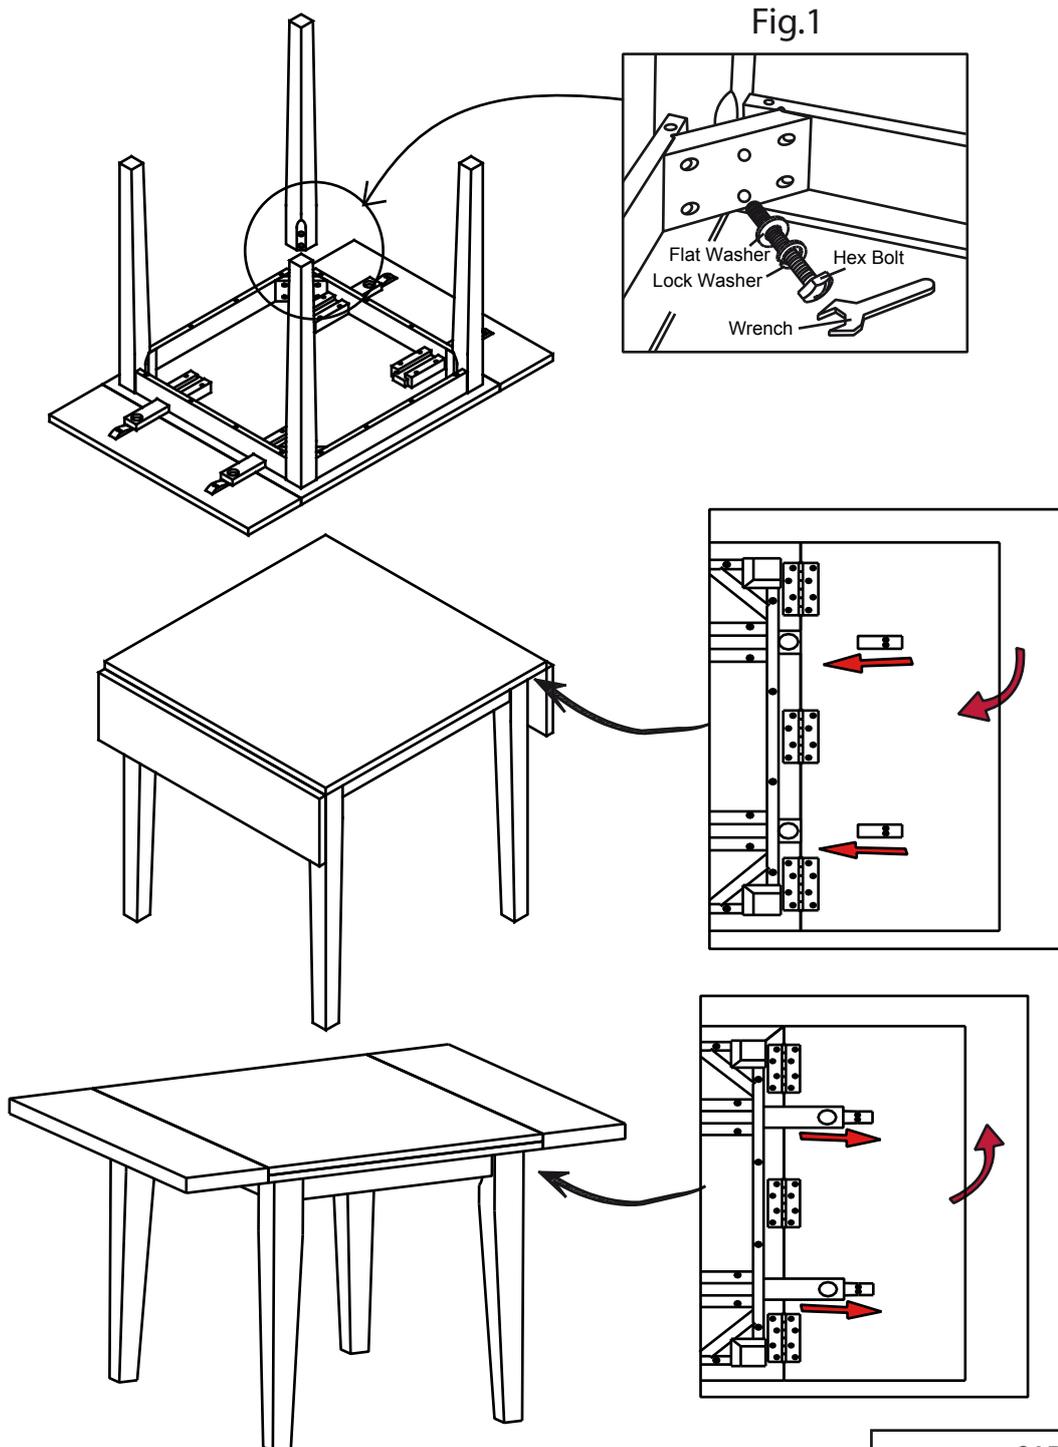

Assembly is now Completed.

CARE INSTRUCTION

- ~ Be sure to use the same type of polish consistently. Your furniture will appear cloudy or streaky if oil based or wax based polishes are interchanged.
- ~ Spray your furniture surface evenly. Wipe in a circular motion with a soft clean cloth.