

 

 
 
 
 
WINNERS ONLY® Assembly Instructions

DR2453S


 




BOWBACK WINDSOR CHAIR

Thank you for purchasing this quality product. Be sure to check all packaging material carefully for small parts that may have come loose inside the carton during shipment.

COMPONENT LIST:

PART NO	FIGURE	DESCRIPTION	QTY
DR2453S-01		Hardware Bag	1 pce
DR2453S-02		Chair Back	1 pce
DR2453S-05		Right Leg Assembly	1 pce
DR2453S-06		Left Leg Assembly	1 pce
DR2453S-11		Center Stretcher (Long)	1 pce
DR2453S-12		Center Stretcher (Short)	1 pce

HARDWARE LIST:

PART NO	FIGURE	DESCRIPTION	QTY
1		JCBC Bolt	10 pcs
2		Lock Washer	6pcs
3		Flat Washer	6pcs
4		Allen Key	1pce
5		JRN Nut	4pcs
6		Wood Plug	4pcs


This product will take 15-20 minutes to assemble.

Reminders

1. Use only the hardware supplied.
2. Once the product is assembled, level and tighten all the bolts.
3. Do not over-tighten bolts.
4. This item may require periodic tightening

NOTE:

1. Two or two people are needed for assembly
2. Please keep all hardware parts out of the reach of children.

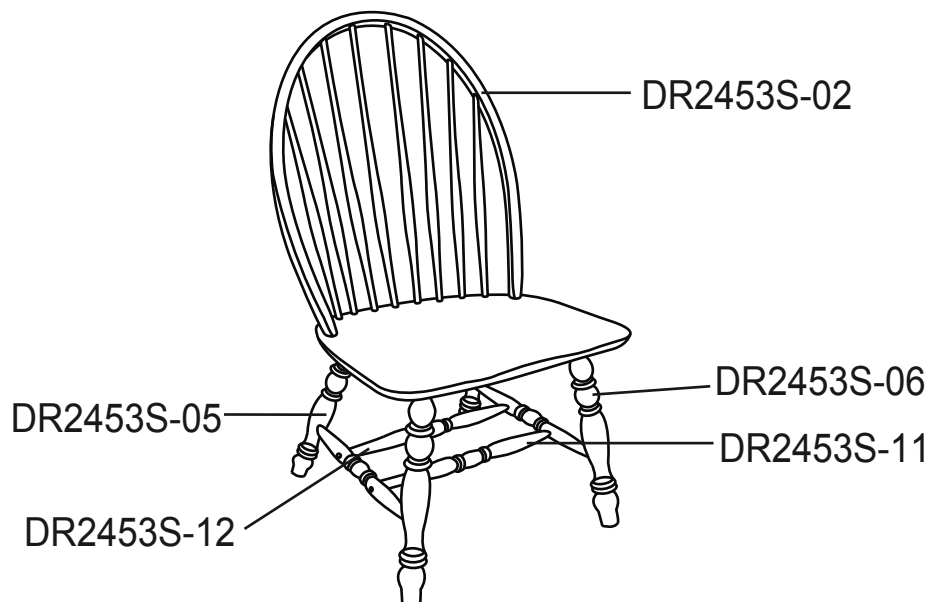


WINNERS ONLY® Assembly Instructions

DR2453S BOWBACK WINDSOR CHAIR

ASSEMBLY :

STEP 1

- 1.1-Insert the center stretcher into the **RIGHT AND LEFT LEG ASSEMBLY**. Make sure its JRN NUT holes are facing down. Insert a **JRN NUT** into the center stretchers hole and position it with a screw driver.
- 1.2-Insert the **JCBC BOLT** through the **RIGHT AND LEFT LEG ASSEMBLY** into each of the center stretcher. Hand tighten using the provided **ALLEN KEY** Do not fully tighten bolts yet.

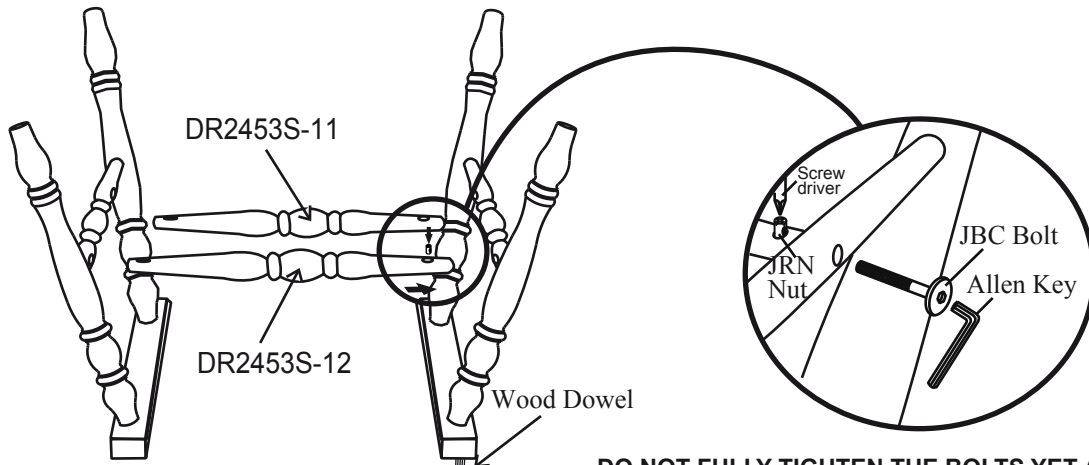

DO NOT FULLY TIGHTEN THE BOLTS YET AT THIS STEP.

STEP 2

- 2.1- Attach the **CHAIR LEG ASSEMBLY** (left and right) to the **CHAIR BACK** using **LOCK WASHERS AND FLAT WASHERS, JCBC BOLTS** and hand tighten with **ALLEN KEY**.
- 2.2- Once chair is balanced fully tighten all bolts.
- 2.3- Cover the holes located in the **RIGHT AND LEFT LEG ASSEMBLY** with the **WOOD PLUGS** provided.

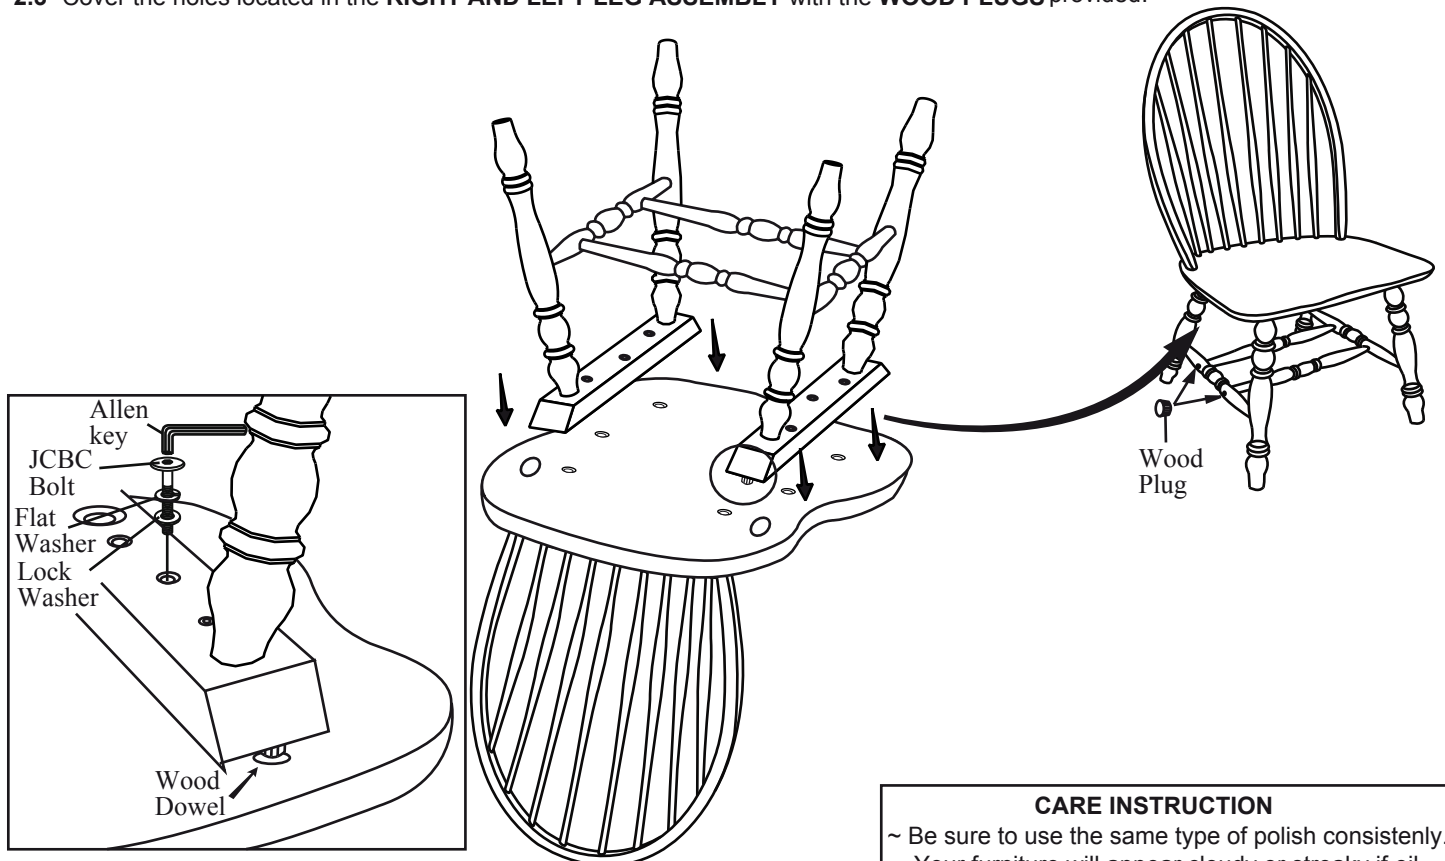


Fig.2

CARE INSTRUCTION

- ~ Be sure to use the same type of polish consistently. Your furniture will appear cloudy or streaky if oil based or wax based polishes are interchanged.
- ~ Spray your furniture surface evenly. Wipe in a circular motion with a soft clean cloth.