


1		6PCS 5/16" Washer	3		6PCS 5/16"x1-1/2" Machine Bolts
2		6PCS 5/16" Spring Washer			

Caution : Please read instructions thoroughly before unpacking assembly parts. Sharp, exposed staple tips can cause injury, therefore, for your protection, please remove any exposed staples used in packing.

Please keep all hardware parts out of the reach of children.

1. We recommend that you should assemble this product with the assistance of another person; this will make assembly easier, and will help to eliminate damage to the product or injury to persons during assembly.
2. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.
3. Please do not over tighten screws or bolts.
4. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

Turn the headboard over in order to assemble the legs. Insert the parts (1),(2) and (3) through the hole of the leg on the back of the headboard. Repeat the step for the other side.

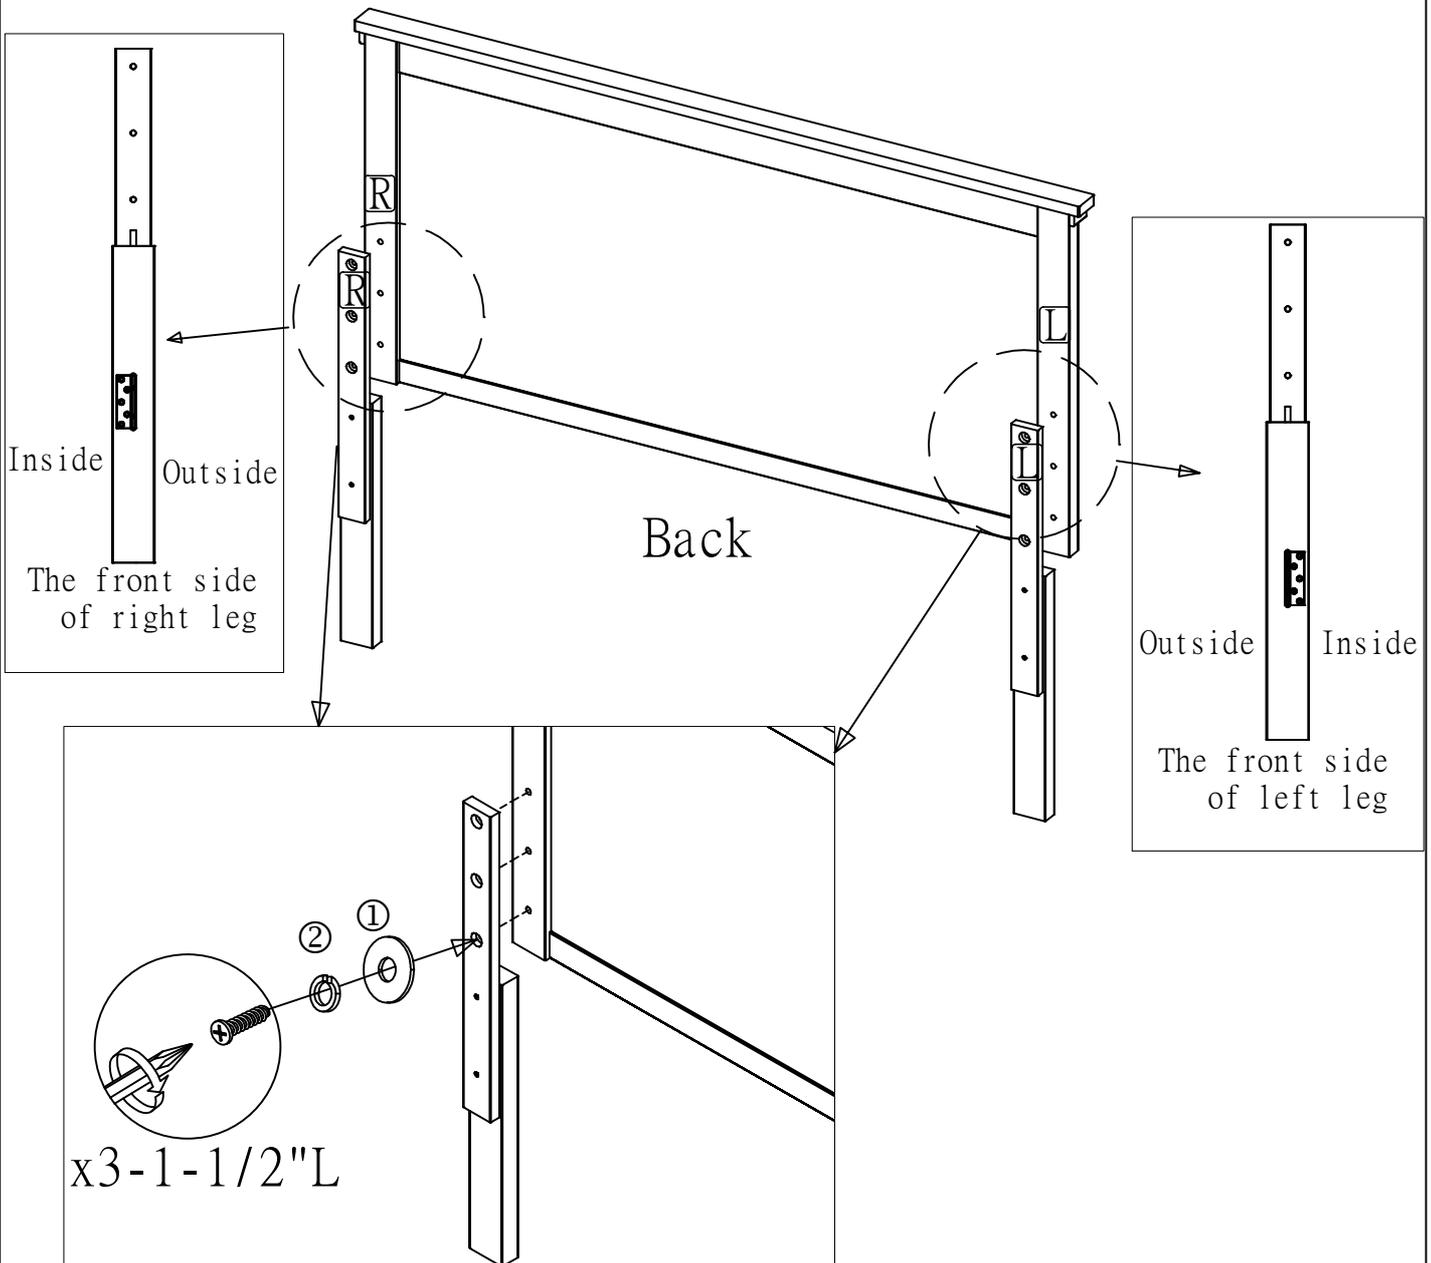

Parts List (included in BCA1001Q)

1-1/4" Sharp End Screws	8 pcs
Slats	4 pcs
Slat Support Legs	4 pcs

Parts List (included in BCA1001K/CK)

1-3/4" Sharp End Screws	8 pcs
Slats	4 pcs
Slat Support Legs	8 pcs


Caution : Please read instructions thoroughly before unpacking assembly parts. Sharp, exposed staple tips can cause injury, therefore, for your protection, please remove any exposed staples used in packing.

Please keep all hardware parts out of the reach of children.


1. We recommend that you should assemble this product with the assistance of another person; this will make assembly easier, and will help to eliminate damage to the product or injury to persons during assembly.
2. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.
3. Please do not over tighten screws or bolts.
4. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

1. Pick up one side rail and insert the hook into the post slot of the footboard.
2. Repeat step 1 to attach the other side rail.
3. Follow steps 1 & 2 to attach the headboard.
4. Attach slat support legs to slat as indicated in diagram, with metal insert neck facing up.
5. Lay 4 slats across bed as indicated in diagram. Align the pre-drilled holes of the wooden slats with the pre-drilled holes of the bed side rail. Secure by using 1-1/4" sharp end screws.


BCA(BCU)1001Q

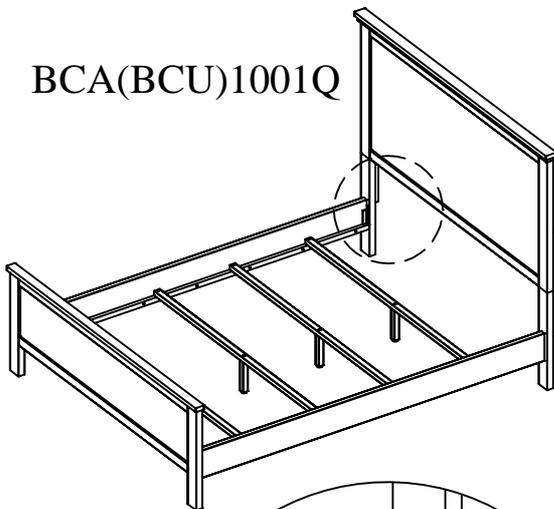

BCA(BCU)1001K

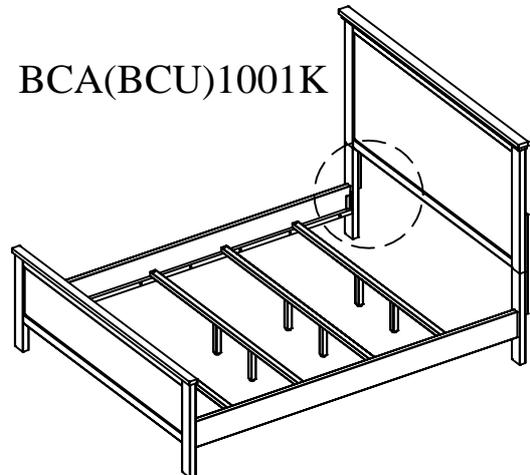

Insert on the outside slot.

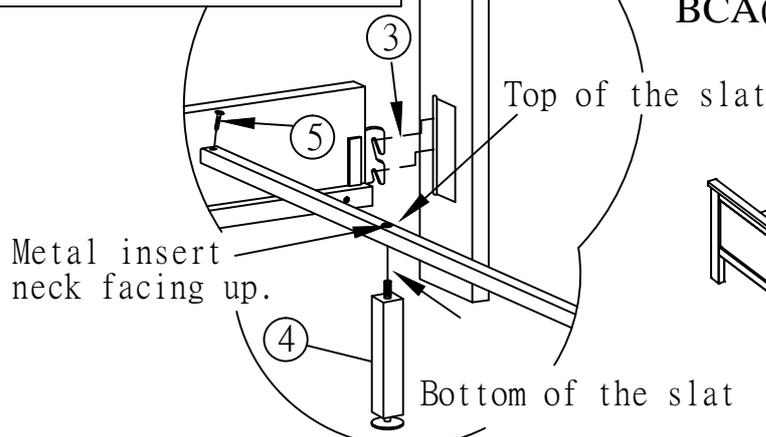

BCA(BCU)1001CK

